


68—535 Remove and install ornamental cover at the rear column (coupe)

Note


In order to avoid damage to the ornamental cover and the vehicle surface during installation, the ornamental cover must be covered with masking tape.

Remove


- 1 Pull weatherstrip out of the inner ornamental frame approximately up to the middle of the vehicle.
- 2 Remove cover at the weatherstrip (68—530).

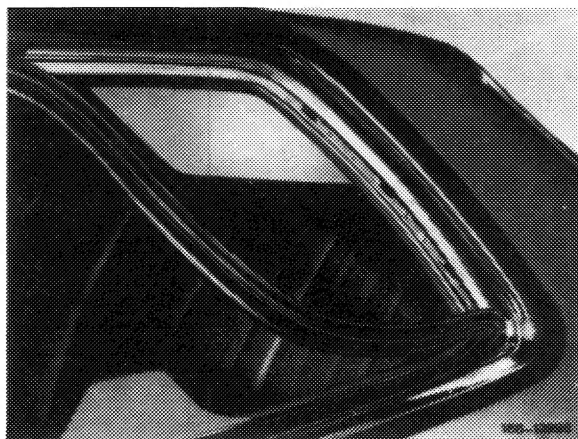


- 3 Starting at the rear remove screws at ornamental frame also up to the middle of the vehicle.
- 4 In this area, unhook headlining from the ornamental frame.

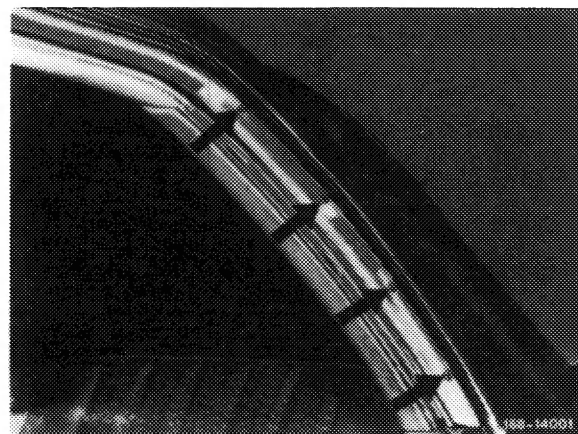

- 5 At the rear of the ornamental frame pull downwards, until the two upper screws at the ornamental cover can be removed.

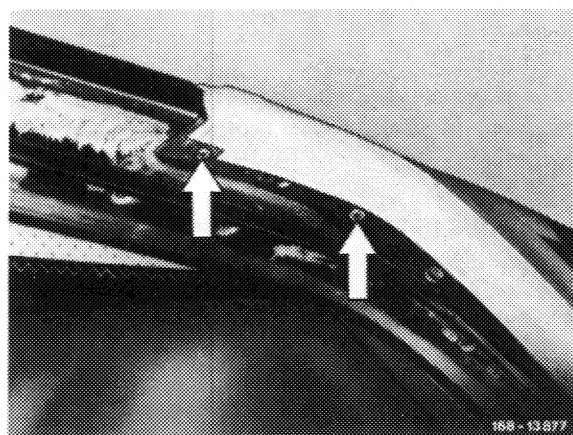


6 Remove screw at the ornamental cover.

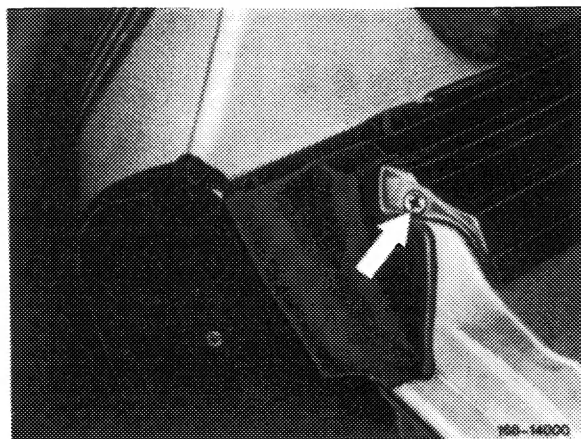

7 Pull out ornamental cover from the two lower clips.


8 Pull ornamental cover outward at the rear and at the top out of the weatherstrip.

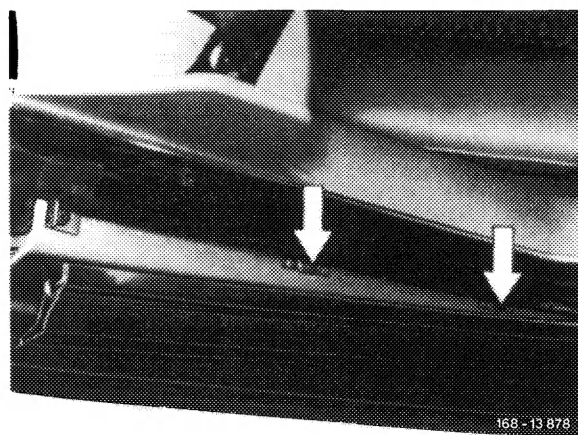

Install

9 Apply two layers of MB sealing, part No. 001 987 56 46, to the ornamental cover to seal against water and dust.

10 Starting at the rear, guide ornamental cover into the weatherstrip.

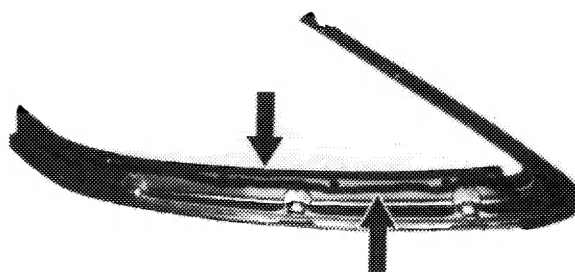

11 Secure both screws at the top of the ornamental cover.

12 For proper sealing between ornamental cover and ornamental frame fit rubber profile into ornamental frame.

13 Starting from the front, secure attaching screws of the ornamental frame and the ornamental cover.

14 Further installation takes place in reverse order.

